

Pre-requisites

Users of this space need to attend the security office to sign out:

- 1) Swipe card to gain access to the touch panel located behind a locked door in the Miss Sushi foyer area.
- 2) A key to unlock the locker located in the outside area – access point for laptops and 240 GPO


System Components

The following equipment is connected to the AV system:

- Quad mounted flat panel displays
- Digital signage server
- Television (set top box)
- Wireless microphones
- HDMI, VGA and 3.5mm audio cables – To connect Analog & Digital laptops
- Desktop PC is not available

Touch Panel

The touch panel is used for all interaction with the AV system

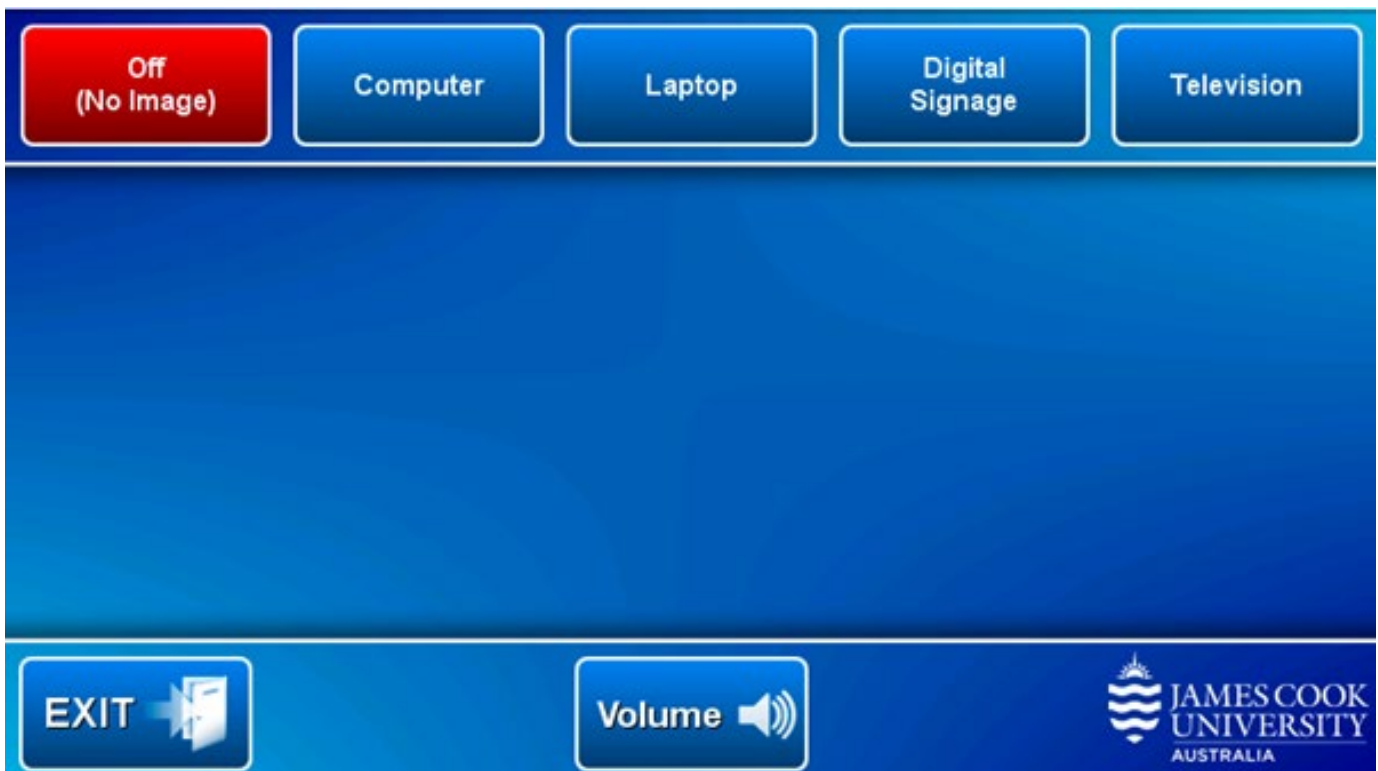

Show Presentation

Show Laptop

Connect the HDMI or VGA and 3.5mm audio cable to the laptop, enable the laptop's dual display (Duplicate) and touch the **Laptop** button to show it on the flat panels.

Show Digital Signage

Touch the **Digital Signage** button to display current information – the content is not provided by VAVS.

Show Television

Touch the **Television** button to show a free to air TV channel

Volume control

Touch the **Volume** button to access the volume control.

Program Volume – touch and slide to adjust the audio component of the presentation. Ensure the laptop volume is turned up and not muted.

Wireless Mic. Volume – touch and slide to adjust the microphone volume in the outdoor area

Cable Mic. Volume – touch and slide to adjust a microphone connected to the AV system in the outdoor area

Support

AV Technical support Townsville:

Ext. 14643

AV Technical support Cairns:

Ext. 21700

Mediasite content:

mediasite@jcu.edu.au

Computers:

Ext. 15500

A/C or electrical faults:

Mex request

Security:

Ext. 16000