

System Components

The following equipment is connected to the AV system:

- 1x projector
- AV button controller
- Wireless Collaborator (Kramer Via)

AV button controller


The control is used for all interaction with the AV system

Show laptop/portable DVD player on the projector screen

- Connect the device to the AV system using an HDMI or VGA cable (and 3.5mm audio if required)
- Push the **Laptop** button on the AV control
- Ensure the device volume is turned up and not muted if the presentation contains an audio component (Youtube, DVD etc.)

Wireless Collaborator

Press the **PRESENT** button on the AV control and follow the instructions for how to connect a BYOD (tablet/smartphone/laptop).

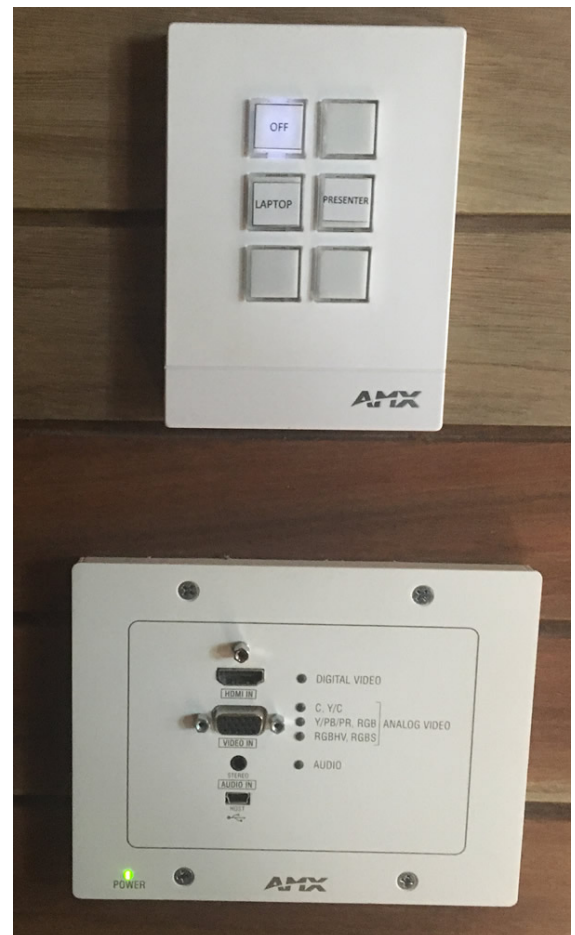

Support

AV Technical support Townsville:

Ext. 14643

AV Technical support Cairns:

Ext. 21700

Mediasite content:

mediasite@jcu.edu.au

Computers:

Ext. 15500

A/C or electrical faults:

Mex request

Security:

Ext. 16000