



# AV Equipment Guide

## Room Concept

There are two tables, each with an associated wall mounted flat panel display. An AV button control is used to select media input (laptop and wireless presenter) and adjust volume.

## System Components

The following equipment is connected to the AV system:

- 2x wall mounted flat panel displays
- 2x AV button controllers (wall mounted below the flat panel display)
- Wireless Presenter
- HDMI cable with liberty adaptors to connect digital laptop

## AV button control

A 6-button AV control is used for all interaction with the AV system.

The system turns on when the Laptop or Wireless button is pressed



## Show Laptop

Connect the HDMI cable (use a liberty adaptor for other types of laptop outputs), enable the laptop's dual display (duplicate or mirror) and press the **Laptop button** to show it on the flat panel.

## Show Wireless Presenter

Touch the **Wireless button** to show the wireless presenter on the flat panel. Instructions for how to connect to the wireless presenter are shown on the flat panel display.

## Volume control

Touch and slide the **Volume up or down button** to adjust the volume of the audio content of the laptop or wireless presenter presentation. Ensure the laptop volume is turned and not muted.

## Support

AV Technical support Cairns:	Ext. 21700
AV Technical support Townsville:	Ext. 14643
Mediasite:	LTSE Staff
Computers:	Ext. 21777
A/C or electrical faults:	Mex request
Security:	Ext. 21293