

TANDBERG REMOTE TRC 4

Basic Use Guidelines - Quick Sheet

This control is used to operate the videoconferencing system. Aim the remote control towards the Videoconference unit before pressing a key.



1. Mute microphone
2. Arrow keys used to
a) pan/tilt camera
b) navigate the menu
3. Volume control
4. Layout toggles display layout
5. Cancel takes you back one step in the menu system or to delete characters in an input field.
6. Call key - to place a call
7. Camera angle presets
8. Snapshot takes a snapshot of your video (if you are in a call)
9. Control Main and Dual Video
10. Press OK/Menu to show menu
11. Zoom control for main camera
12. Selfview displays your outgoing video
13. Phone book
14. Disconnect a call
15. Number/letter keys
16. Used to dial extensions and Bridge ID#
17. Control Far End Camera

During a conference, use these buttons to select your presentation source:

- A. Main Camera
- B. PC
- C. Document Camera
- D. DVD Player
- E. Auxiliary Camera